


NOTES:

1. THICKNESS OF AGGREGATE BASE WILL VARY WITH SUBGRADE CONDITIONS AND CLIMATE. COLDER CLIMATES MAY REQUIRE THICKER BASES.
2. CONCRETE PAVERS SHOULD BE PLACED ON A CEMENT-TREATED BASE IF SOIL IS EXTREMELY WEAK OR CONSTANTLY SATURATED. PAVERS CAN BE OVERLAID OR INLAID ON EXISTING ASPHALT OR CONCRETE DRIVEWAYS.
3. CONSULT ICPI TECH SPEC 2 FOR GUIDELINES ON SPECIFICATIONS FOR BASE MATERIALS, SUBGRADE SOIL AND BASE COMPACTION.
4. PLASTIC, STEEL, ALUMINUM OR PRECAST CONCRETE EDGING MAY BE USED.

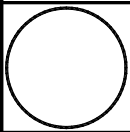

**RESIDENTIAL DRIVEWAY WITH
CONCRETE EDGES**

DRAWING NO.	ICPI-09
SCALE	NO SCALE